

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit https://www.performanceparts.ford.com for warranty information



Vehicle Fitment

- ✓ This kit fits only the Timberline vehicle package
- ✓ Pre existing Factory installation of Auxiliary Lamp Switch and Led Indicator must be verified
- ✓ This kit contains no wiring or switches.



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020



Kit Contents	Qty
LED lamp	2
Ford Performance branded lens covers	2

INSTALLATION PROCEDURE


1. Remove Aux Light Bezel with flathead screwdriver or flat trim remover tools. Unseat clips and pull off manually.





NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

2. Unscrew Factory-Installed Delete Covers with 10mm socket and remove light wire harness protective caps (x2).

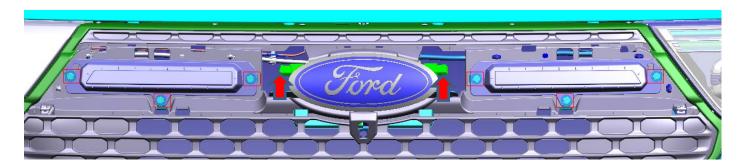

3. Plug light pigtail (not shown) into harnesses (x2). Hide the wirings behind light assemblies. Install aux lights into grille using the original fasteners. Torque 7.0+/-0.5 NM





NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

4. Install aux light bezel back into grille. Tuck in the lens covers as needed on-road.





NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

5. The AUX lighting switch and indicator LED can be located below:

