



**Part Number: M-16628-FG/FM**  
**Part Description: F150 RAPTOR CARBON FIBER HOOD VENT INSTALLATION INSTRUCTIONS**

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS.

Please visit [www.performanceparts.ford.com](http://www.performanceparts.ford.com) for the most current instruction information

**!!! PLEASE READ ALL OF THE FOLLOWING INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION.**

**AT ANY TIME, IF YOU DO NOT UNDERSTAND THE INSTRUCTIONS, PLEASE CALL THE FORD PERFORMANCE TECHLINE AT 1-800-367-3788!**



**Kit Contents:**


Quantity	Part Name
1	Hood Scoop
1	RH Trim Panel
1	LH Trim Panel
20	Clips
2	Raptor Emblems
4	Nuts, Emblem
6	M6, T-Studs
6	Nuts, Scoop to Hood

Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356

**Part Number: M-16628-FG/FM**  
**Part Description: F150 RAPTOR CARBON FIBER HOOD VENT INSTALLATION INSTRUCTIONS**

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS.

1. Remove the retainer and position the conductor strap aside.
2. Remove the retainers and hood insulation.

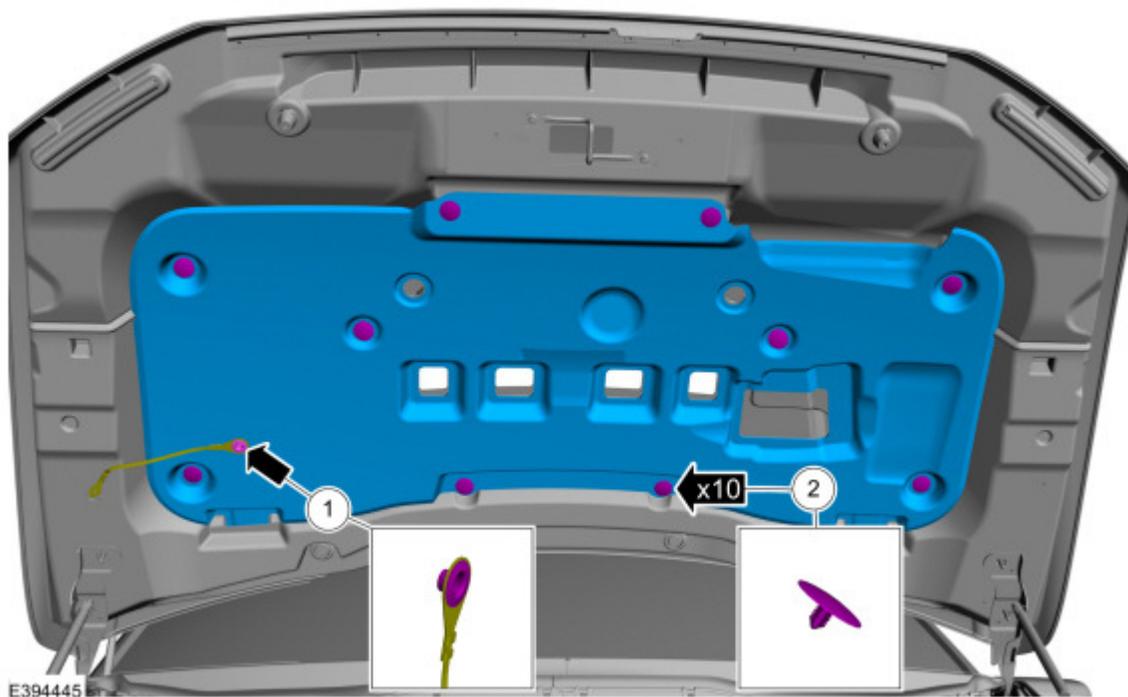

3. Remove 4 nut covers.




**Part Number: M-16628-FG/FM**  
**Part Description: F150 RAPTOR CARBON FIBER HOOD VENT INSTALLATION INSTRUCTIONS**

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS.

4. Remove 6 nuts.



5. Compress retention clips where there is accessibility. Use non-marring tools to pry up the scoop starting from a back corner working around to the front and the opposite side.

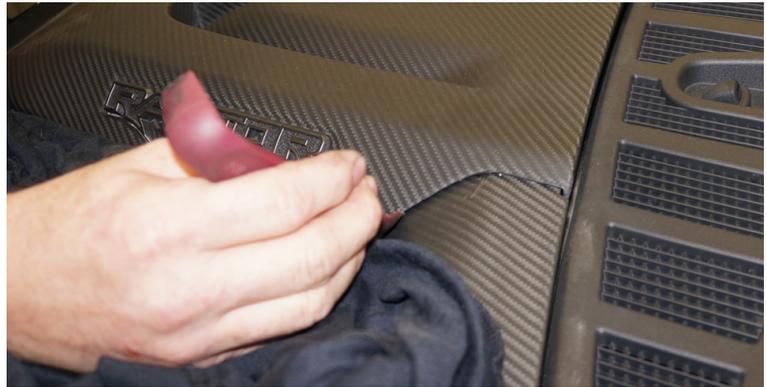

6. Once the front is lifted, use a razor blade to cut the adhesive tape.




**Part Number: M-16628-FG/FM**  
**Part Description: F150 RAPTOR CARBON FIBER HOOD VENT INSTALLATION INSTRUCTIONS**

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS.

7. Use non-marring tool to remove both Trim Panels.



8. Clean surfaces before installing new parts.
9. Install the supplied Raptor emblems, nuts and attaching clips.

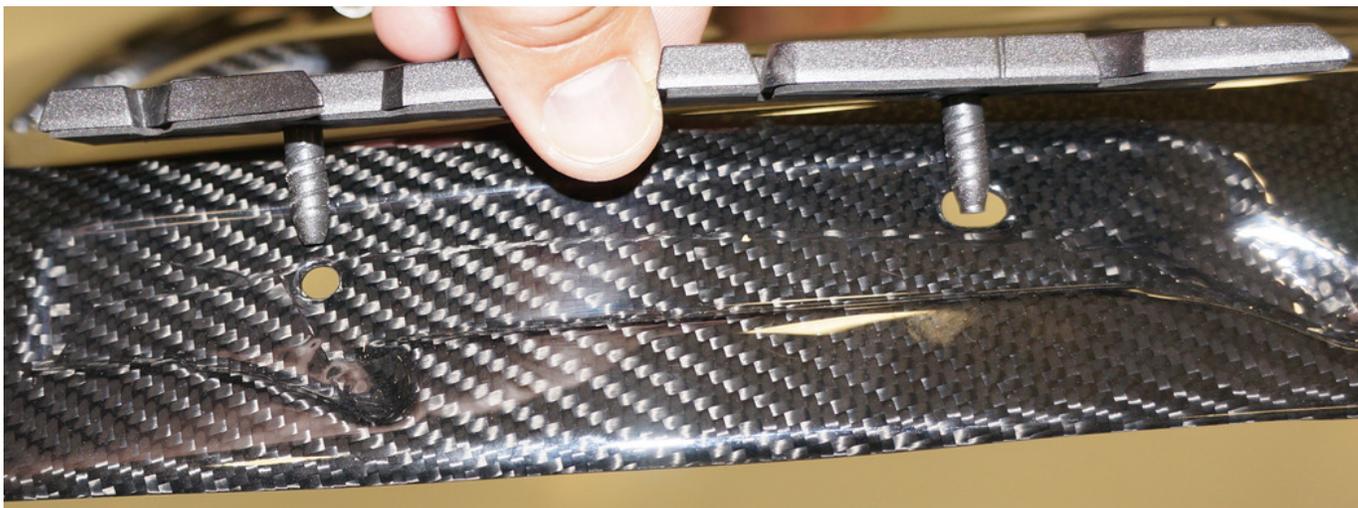

**Part Number: M-16628-FG/FM**  
**Part Description: F150 RAPTOR CARBON FIBER HOOD VENT INSTALLATION INSTRUCTIONS**

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS.



Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356

**Part Number: M-16628-FG/FM**  
**Part Description: F150 RAPTOR CARBON FIBER HOOD VENT INSTALLATION INSTRUCTIONS**

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS.

10. Start by installing the Trim Panels, then the Scoop. Remove the adhesive tape covering and install parts using minimal pressure to press in clips.



11. Install the supplied 6 Scoop nuts, original 4 nut covers and hood insulation.



Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356