



FORD PERFORMANCE

M-18954-RA M-18954-RAB
Ford Ranger 2019 → 2021
Tow Hooks

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020


PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY
For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit <https://www.performanceparts.ford.com> for warranty information


Kit includes:

- 2 – Tow Hooks
- 4 – Tow hook Bolts – M12 x 40 (pending tow hook geomtry. See step 4)

1. If equipped, remove the bolts and skid plate
 - a. *Torque 22 lb-ft (30 Nm)*

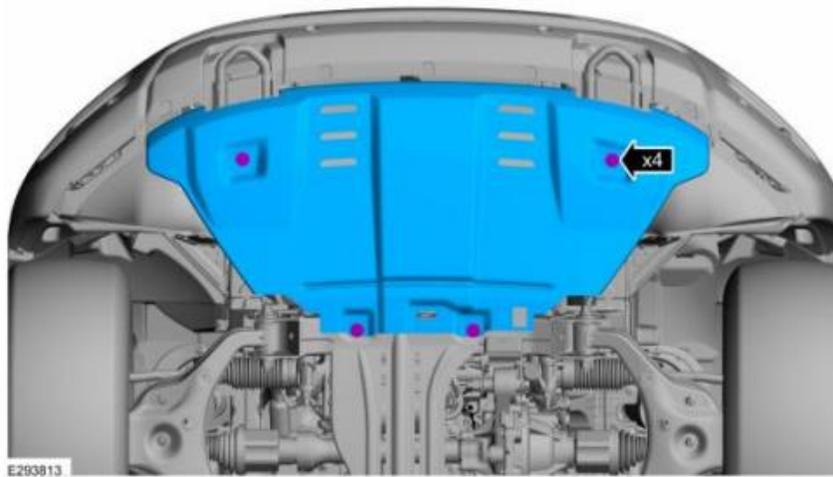


2. If equipped, tilt back and remove the front tow hook covers

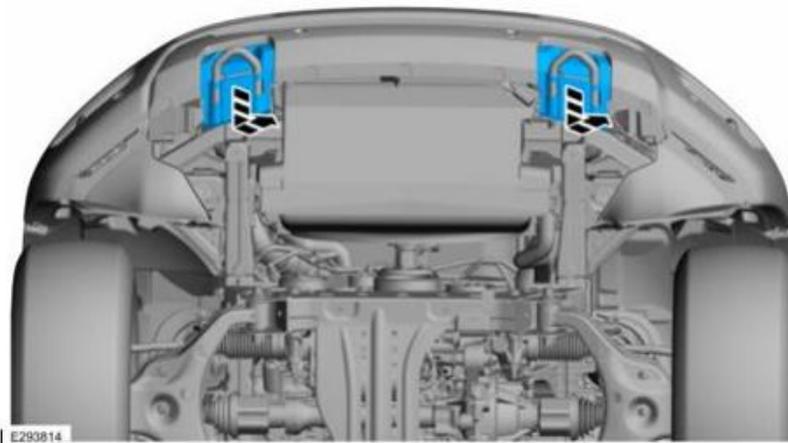

Ford Factory Shop Manual purchase options www.motorcraftservice.com


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

3. Remove the bolts and front tow hook assemblies

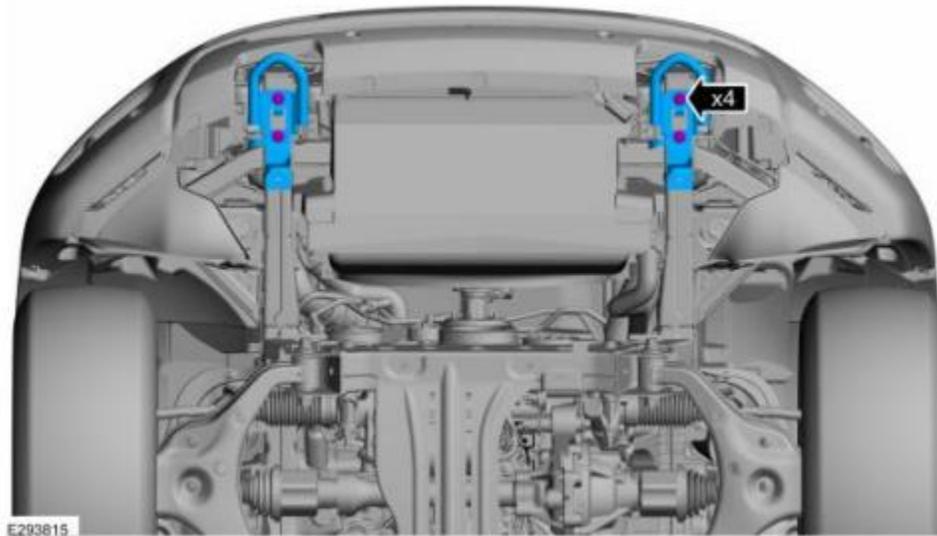


4. Install supplied tow hooks and bolts

- a. Follow torque specifications listed below depending on supplied tow hook geometry

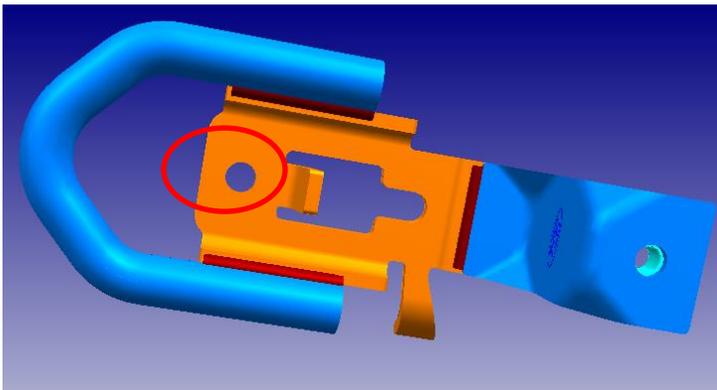

Re-install 4x bolts from Step 3
Torque: 62.5 +/- 9.4 Nm

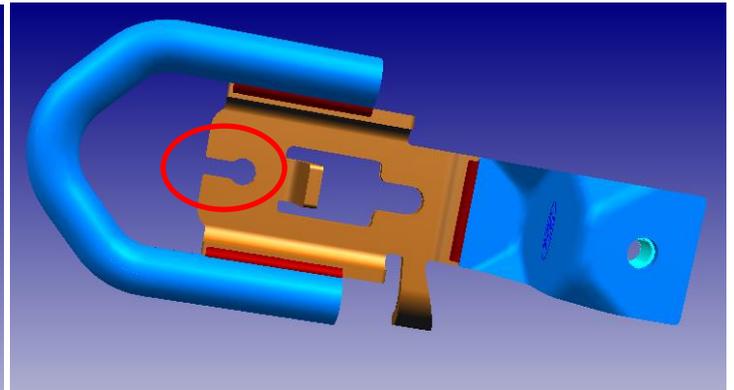

Install 4x bolts supplied with kit
Torque: 80 +/- 12 Nm

5. Reverse procedure to re-install tow hook covers and skid plate

Ford Factory Shop Manual purchase options www.motorcraftservice.com